


Instruction Manual

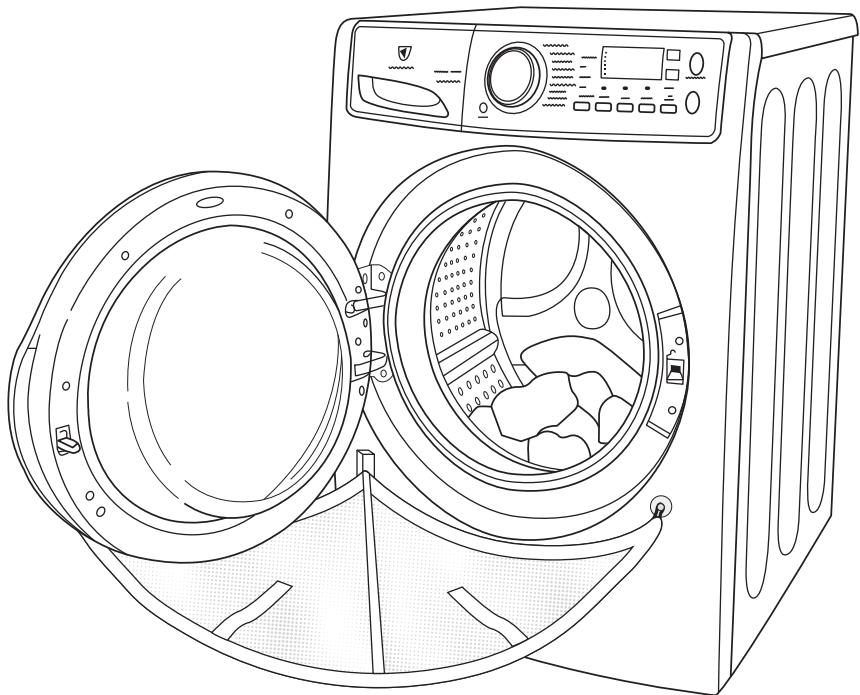

LAUNDRONET

Your Clothes Deserve Better Than The Floor!

By SmileyPAT LLC.

Patent Pending

Table of Contents

| | |
|------------------------------------|-----|
| Introduction, Warnings | 1 |
| Assembly Directions | 2-4 |
| Demo Video QR Code | 5 |
| Maintenance and care | 5 |
| Support | 5 |
| Product Liability Disclaimer | 6 |


Introduction/Description:

Laundronet is an attachable net for washers and dryers that saves clothes from falling on the floor when switching loads. With Laundronet your clothes stay clean the way they are meant to.

Warning:

- This product is not meant to be used as a laundry basket.
- Overloading or incorrect folding or use of unauthorized spare parts may cause product damage making it faulty and unfit to use.
- This product is not suitable for heavy weighted items like blankets. It is designed for lightweight items only.
- Do not leave product open and/or unattached as it may be a tripping hazard.
- Make sure this product is correctly attached before using.
- This product is not a toy; keep children away from this product.
- Do not purposefully drop items on the net.
- SPOT CLEAN ONLY. DO NOT WASH.

ASSEMBLY & INSTALLATION INSTRUCTIONS

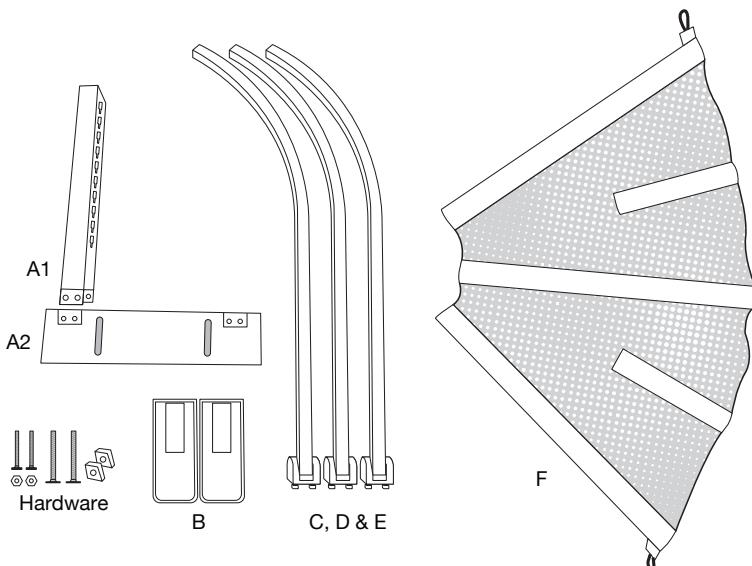

STEP 1

1. Create **A** by attaching **A1** and **A2** with the smaller bolts and nuts (Figure 1).
2. Check which way your machine door opens.

Left to Right door:
follow Figures 2–3.

Right to Left door:
follow Figures 4–5.
3. Attach pieces **B** to **A**.
4. Keep screws **loose** to allow height adjustment later.

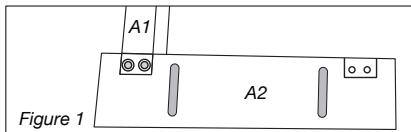


Figure 1

Left to Right Door Opening

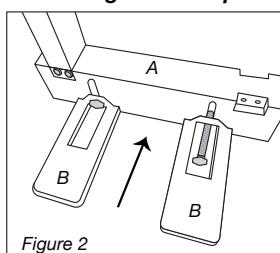


Figure 2

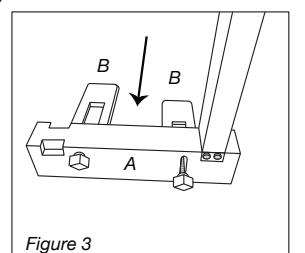


Figure 3

Blight to Left Door Opening

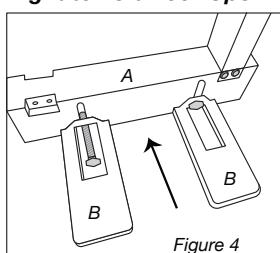


Figure 4

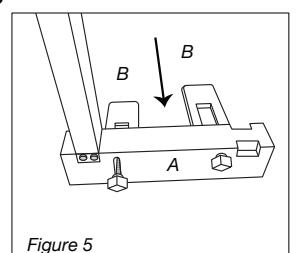


Figure 5

STEP 2

1. **Slide** the hooks on **E** into **A** (Figure 5).
2. **Push down** until locked in.
3. Position on your machine as shown (Figure 6 or 7).
Piece **E** should be flush with the bottom of door
Pieces **B** will slide underneath the machine
4. **Lift** the nut on each side until pressed against the bottom of the washer, and **tighten** in place.
5. Note the height setting and remove **E** from **A**.

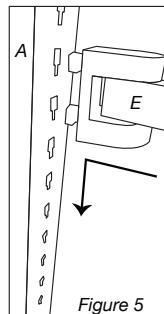


Figure 5

Left to Right Door Opening

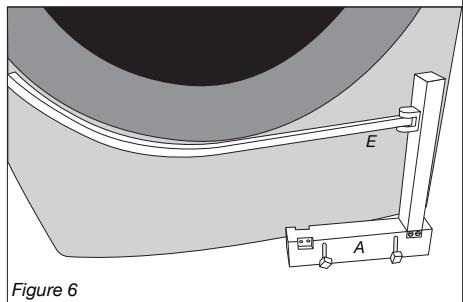


Figure 6

Right to Left Door Opening

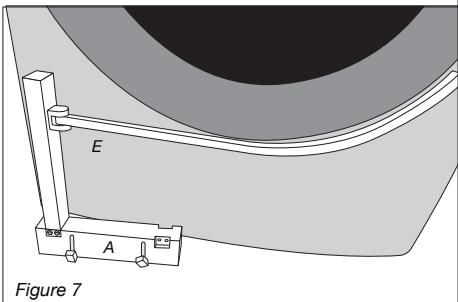


Figure 7

STEP 3

1. Lay **F** with the tag side up.
2. **Slide** the rods into the channels on the net as shown.
Left → Right door: follow Figure 8.
Right → Left door: follow Figure 9.
3. **Hook** elastic loops onto suction cups.
4. **Pull tightly** until inside the groove
5. **Tighten** the toggle to secure (Figure 10).

Left to Right Door Opening

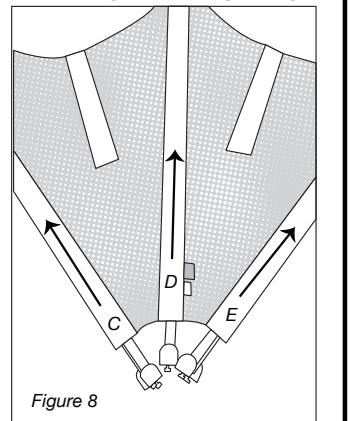


Figure 8

Right to Left Door Opening

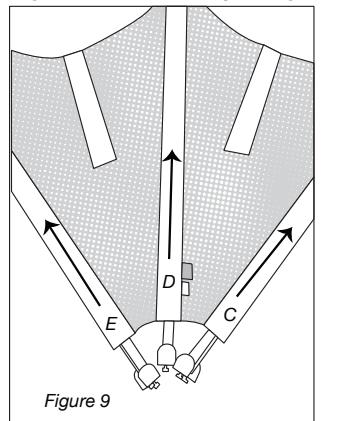


Figure 9

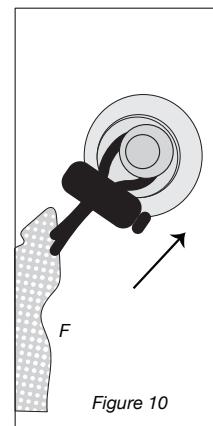


Figure 10

STEP 4

1. **Slide** the hooks on **C, D & E** into **A** (Figure 11A or 11B). Starting from the bottom, with no gaps between, and ending with the top rod in the same position as Step 2.
2. **Push down** until locked in.
3. Attach suction cup at the end of **E** to the door (Figure 12).
4. Attach suction cup at the end of **C** to the machine (Figure 13).
5. **Open** the door to check that product is secure and correctly attached.

Left to Right Door Opening

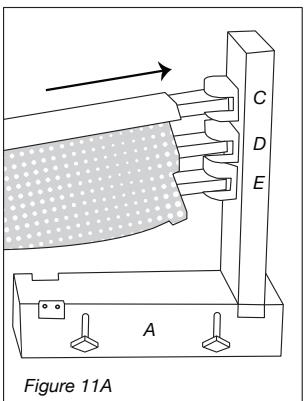


Figure 11A

Right to Left Door Opening

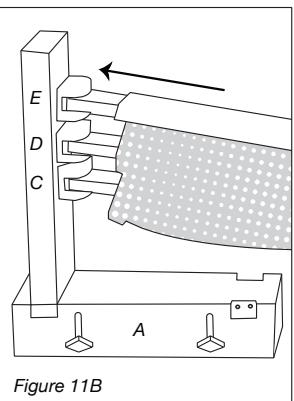


Figure 11B

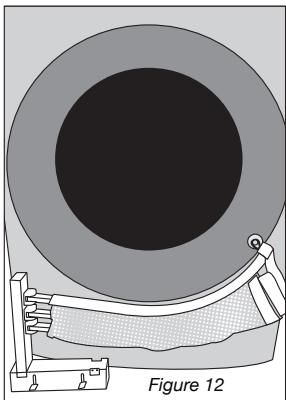


Figure 12

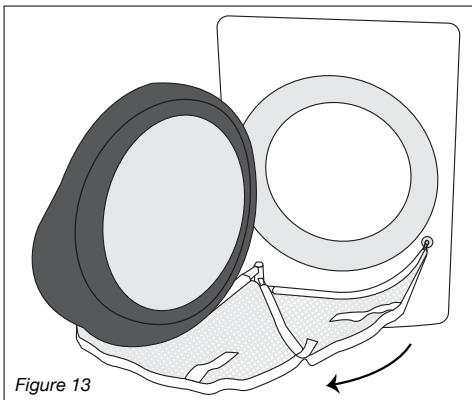


Figure 13

Right to left door opening shown.

ENJOY!

NOTE: Remove any clothes from net after unloading machine. Do not overload net or use as a substitute for a laundry basket.

QR Code for DEMO Video



Maintenance and Care

- Brush any dirt off that may have been caught before using.
- To store, detach from the laundry machine and store flat somewhere safe. Store hardware together in a safe place to avoid losing parts.
- SPOT CLEAN ONLY. To wash, completely remove any plastic parts from the net and SPOT CLEAN ONLY

Support

For support, please go to thelaundronet.com/contactus and submit a support claim. We will get back to you within 24-48 hours.

Product Liability Disclaimer

SmileyPAT LLC offers this product to you conditioned upon your acceptance without modification of the terms, conditions, and notices contained herein. Your continued use of this product constitutes your manifestation of assent to the terms, conditions, and notices contained herein.

This product has been designed for the specific use designated within its accompanying instructional materials. This product may not be used for unlawful uses or for uses not expressly stated in its instructional materials.

SmileyPAT LLC does not represent or warrant that the use of this product will have the results described in its accompanying documentation or that the information provided with this product is complete, accurate, or useful. You should test this product to determine its properties and its suitability for your intended use.

SmileyPAT LLC EXPRESSLY DISCLAIMS ANY RESPONSIBILITY FOR ANY DAMAGE, INJURY, HARM, COST, EXPENSE, OR LIABILITY ARISING OUT OF OR RELATED TO YOUR USE OR MISUSE OF THIS PRODUCT. THIS PRODUCT IS PROVIDED ON AN AS-IS BASIS AND WITHOUT WARRANTY OF ANY KIND, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, ACCURACY, NON-INFRINGEMENT, OR QUALITY. SOME JURISDICTIONS DO NOT ALLOW AN EXCLUSION OF IMPLIED WARRANTIES. IF YOU ARE LOCATED IN SUCH A JURISDICTION, YOU ARE ADVISED TO SEEK LEGAL ADVICE TO DETERMINE IF THIS EXCLUSION APPLIES TO YOU.

SmileyPAT LLC WILL NOT BE LIABLE TO YOU UNDER ANY LEGAL THEORY, WHETHER IN WARRANTY, CONTRACT, STRICT LIABILITY, TORT, OR NEGLIGENCE, FOR ANY DAMAGES, CLAIMS, INJURIES, JUDGMENTS, COSTS, OR LIABILITIES OF ANY KIND ARISING OUT OF OR RELATED TO YOUR USE OR MISUSE OF THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, PERSONAL INJURY, DAMAGE TO PROPERTY, LOSS OF BUSINESS, LOSS OF INCOME, SPECIAL DAMAGES, INCIDENTAL DAMAGES, CONSEQUENTIAL DAMAGES, PUNITIVE DAMAGES, OR EXEMPLARY DAMAGES, WHETHER FORESEEABLE OR UNFORESEEABLE. IN NO EVENT WILL SmileyPAT LLC'S LIABILITY EXCEED THE VALUE OF THE PRODUCT(S) SOLD.

YOU UNDERSTAND AND AGREE THAT THE PRODUCT'S PERFORMANCE MAY VARY DEPENDING ON THE WASHING MACHINE OR DRYER USED WITH THE PRODUCT, RESULTING IN POSSIBLE HARM OR DAMAGE TO THE WASHING MACHINE OR DRYER, E.G., THE DOOR BEING MISALIGNED. YOU ARE RESPONSIBLE TO CHECK THE SUITABILITY OF YOUR WASHING MACHINE OR DRYER FOR USE WITH THE PRODUCT. YOU FULLY ACCEPT AND ASSUME ALL SUCH RISKS AND ALL RESPONSIBILITIES FOR LOSSES, COSTS, AND DAMAGES THAT YOU MAY INCUR AS A RESULT OF YOUR USE OF THE PRODUCT IN CONNECTION WITH YOUR WASHING MACHINE OR DRYER.

This product liability disclaimer states the entire obligation of SmileyPAT LLC with respect to the product(s). If any part of this disclaimer is determined to be void, invalid, unenforceable or illegal, including, but not limited to the warranty disclaimers and liability disclaimers and liability limitations set forth above, then the invalid or unenforceable provision will be deemed superseded by a valid, enforceable provision that most closely matches the intent of the original provision and the remainder of the agreement shall remain in full force and effect.

